


How do I read the contents gauge on my tank?

Your gauge is seated on top of the tank, just beside the hood, and will have a gauge which reads the percentage of LPG within your tank.

The photograph below shows 50% (we only fill tanks to 85% to allow for expansion).

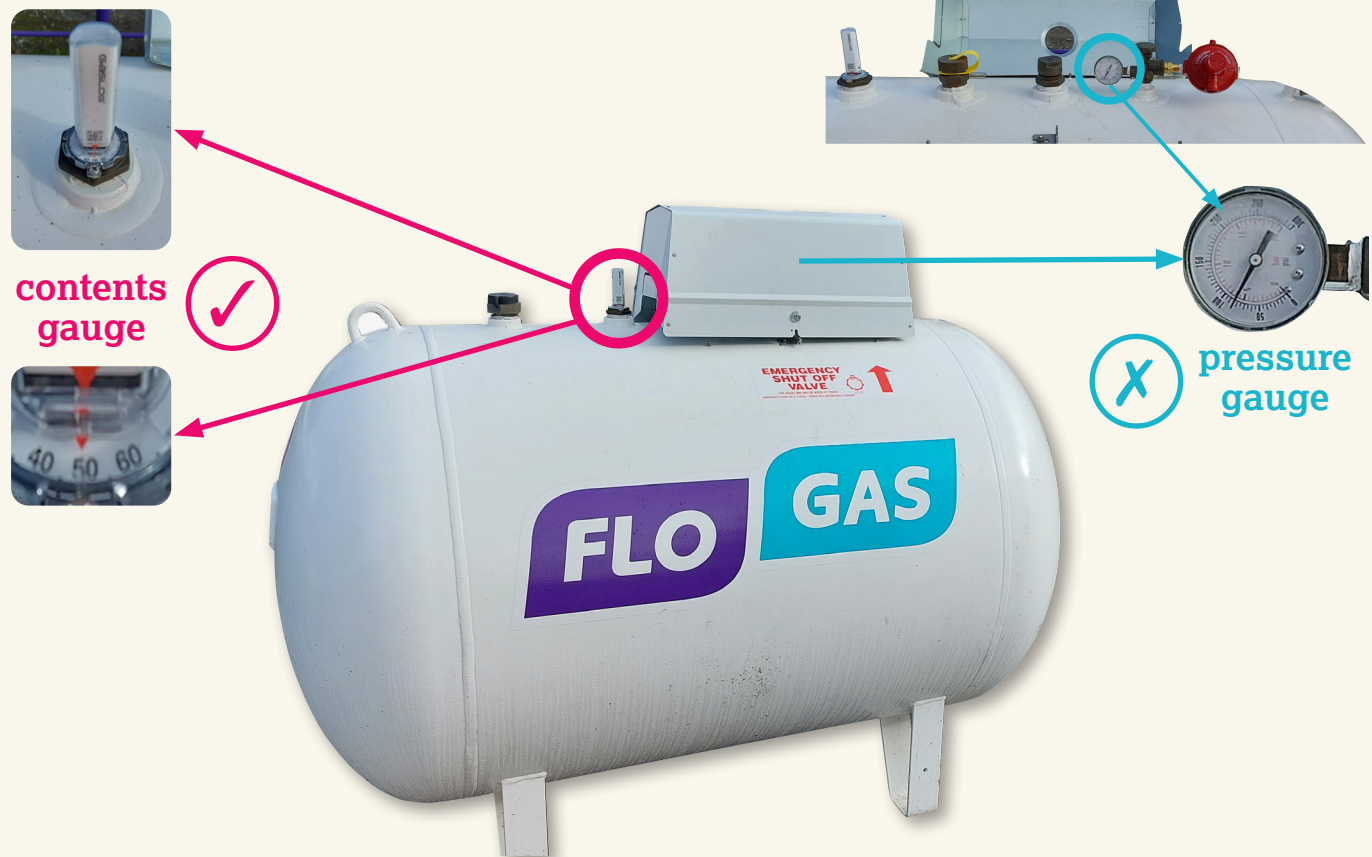

contents gauge



pressure gauge

The gauge under the hood is a pressure gauge and not to be confused with the contents gauge.

